


Dynalink RTA 1046VW ADSL1/ADSL2+ setup guide

- 1. Start your browser (Internet Explorer, Mozilla Firefox, Google Chrome etc).
- 2. In the address bar, type in 192.168.1.1 and press "Enter"

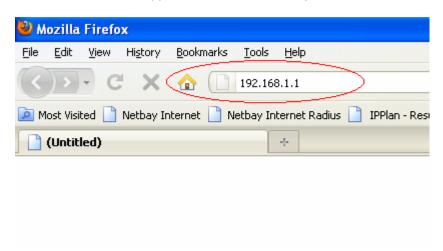


WebAdmin login screen:
You will be prompted to enter username and password.
The default username is admin and the password is admin.



After you successfully login, the main page will appear.

4. RTA1046VW main screen: Click on **Quick Setup**

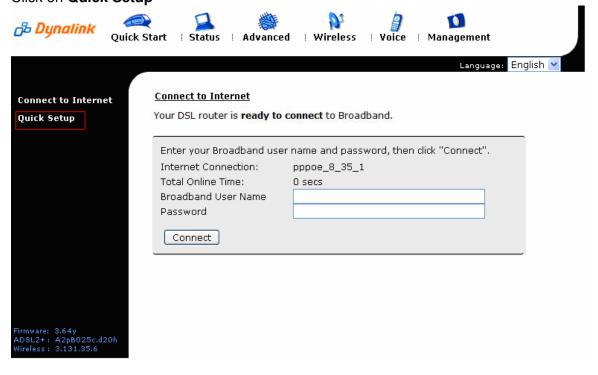

- 5. Quick Setup screen:
 - Uncheck Auto Scan Internet Connection (PVC)
 - Ensure VPI is 8, VCI is 35
 - Click on Next

Quick Setup

 
This Quick Setup will guide you through the steps necessary to configure your ADSL router.

Select the check box below to scan the Internet connection automatically. It is recommended that there is no any PVC configured in your ADSL router before performing auto-scanning connection.

☐ Auto Scan Internet Connection (PVC)


Configure Internet Connection -- ATM PVC

Please enter VPI and VCI numbers for the Internet connection which is provided by your ISP.




All original settings will be replaced by new settings after you finish these steps.

- 6. Configure Internet Connection Connection Type screen:
 - Protocol: Select PPP Over Ethernet (PPPoE)
 - Encapsulation Type: Select LLC/SNAP
 - Check Enable QoS
 - Click on Next

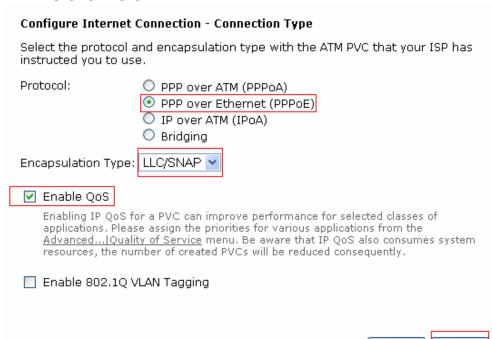

- 7. Configure Internet Connection WAN IP Settings screen:
 - Select Obtain an IP address automatically
 - Check Enable NAT
 - Click Next

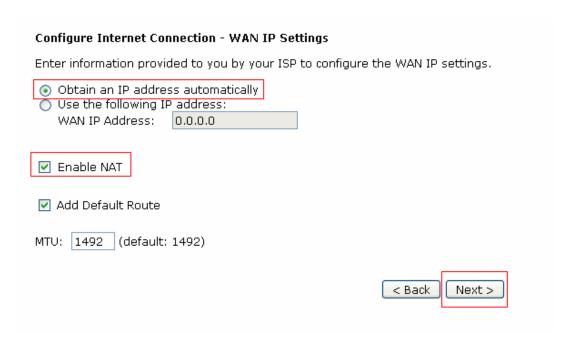


< Back

Next >

- 8. Configure Internet Connection PPP User Name and Password screen:
 - PPP User Name: if your username is johndoe
 - o ADSL1 username: johndoe@dsl.netbay.com.au
 - o ADSL2+ username: johndoe@dsl2.netbay.com.au
 - PPP Password: Enter your password.
 - Session established by: Select Always On
 - PPP will automatically disconnect and connect back at time: Disabled
 - Click on Next

Configure Internet Connection - PPP User Name and Password		
In order to establish the Internet connection, please enter PPP user name and password that your ISP has provided.		
PPP User Name : PPP Password:	johnsmith@dsl.netbay.com.au *********	
Session established by	Always On Dial on Demand Disconnect if no activity for 0 minutes Manually Connect Disconnect if no activity for 0 minutes	
PPP will automatically o	disconnect and connect back at time: Disabled	

- 9. Configure LAN side Settings screen:
 - Ensure the settings on your screen match the screen below.
 - Click on Next

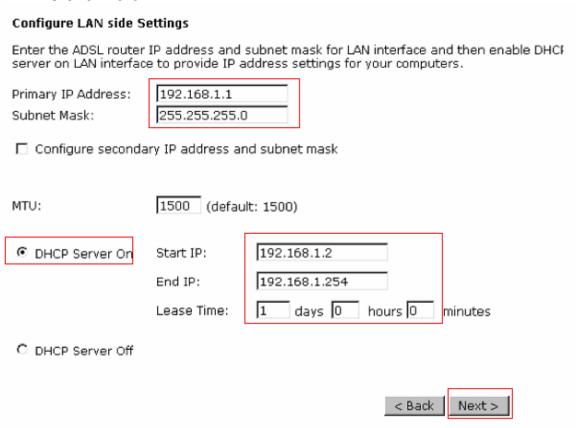

- 10. Confirmation screen:
 - Click on Finish

This Internet Connection -- Summary

VPI / VCI	0/39
Connection Type	PPPoE LLC/SNAP, Always On, QoS On
NAT	Enabled
WAN IP Address	Automatically Assigned
Default Gateway	Automatically Assigned
DNS Server	Automatically Assigned
AN Configuration:	
Primary LAN IP	192.168.1.1 / 255.255.255.0
Secondary LAN IP	0.0.0.0 / 255.255.255
DHCP Server	On 192.168.1.2 ~ 192.168.1.254
DHCP Lease Time	1 days 0 hours 0 minutes

11. The modem will save the new settings and reboot itself. Wait for a few minutes and you will be on the internet.